LIST OF THE EXPLODED VIEWS

From s/n. 297566 up Today



SHELL ASSY

COOLING SYSTEM


HYDRAULIC CIRCUIT

SPRAYER PUMP

ELECTRIC PARTS

Rev. 14 - 11/05/2021

SHELL ASSY

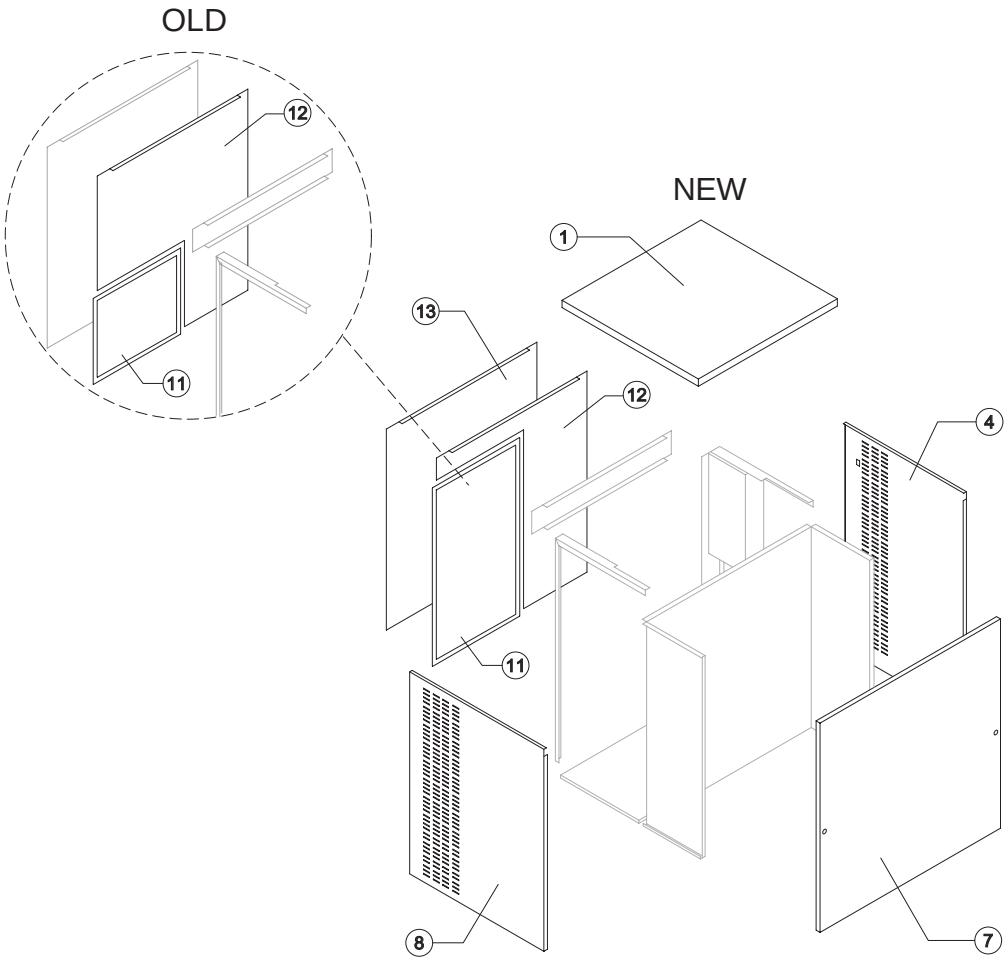

Common Parts

Ref.	Spare Description	Code
1	Top Assembly	C22813
4	Right Side Panel	22408
7	Front Panel Assembly	C22816
8	Left Side Panel	22822

Parts for Air-Cooled Version Only

Ref.	Spare Description	Code
11*	Filter	See Table
12	Rear Panel	See Table

Parts for Water-Cooled Version Only

Ref.	Spare Description	Code
13	Rear Panel	21285

Ref. 11 - Filter


Version	Code
NEW	18178
OLD	18163

Ref. 12 - Rear Panel


Version	Code
NEW	21324
OLD	21286

Rev. 14 - 11/05/2021

OLD

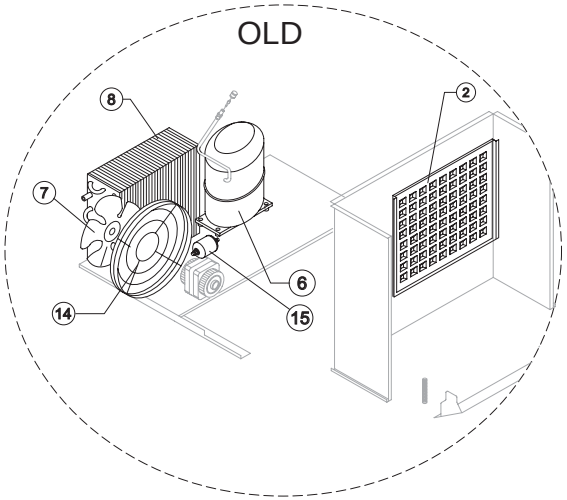

NEW

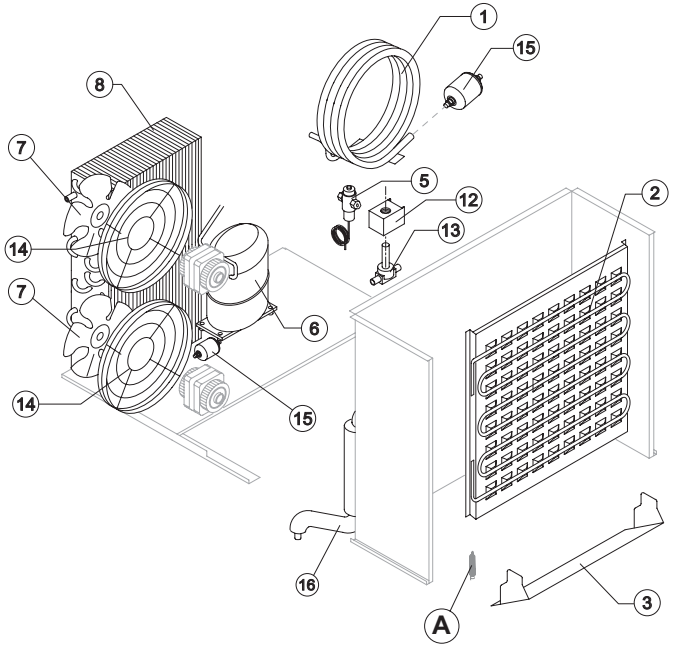

Common Parts

Ref.	Spare Description	Code
2	Evaporator	See Table
3	Horizontally Hinged Panel	22608
6	Compressor	See Table
12*	Hot Gas Valve Coil	231294
13*	Hot Gas Valve Body	201162
15*	Liquid Line Drier	14084
16	Suctin Line	for the spare parts code give us the s/n.

Parts for Air-Cooled Version Only

Ref.	Spare Description	Code
7	Sucking Fan	See Table
8	Air Condenser	See Table
14	Fan Motor Grid	12054

Parts for Water-Cooled Version Only

Ref.	Spare Description	Code
1	Water Condenser	14081
5	Pressostatic Valve	20210

Eliminated the Spring (horizontally hinged panel) ref. A, suggested removal even from the models where they are present.

Ref. 1 - Evaporator

Version	Code
NEW	D10228
OLD	D10227

Ref. 6 - Compressor

Tension	NEW	OLD
220-240V ~ 50Hz	23840	23543
220-230V ~ 60Hz	23897	23642

Ref. 7 - Sucking Fan


Voltage	Code
NEW	20153
OLD	20407

Ref. 8 - Air Condenser

Voltage	Code
NEW	20406
OLD	20670

Rev. 14 - 11/05/2021

HYDRAULIC CIRCUIT

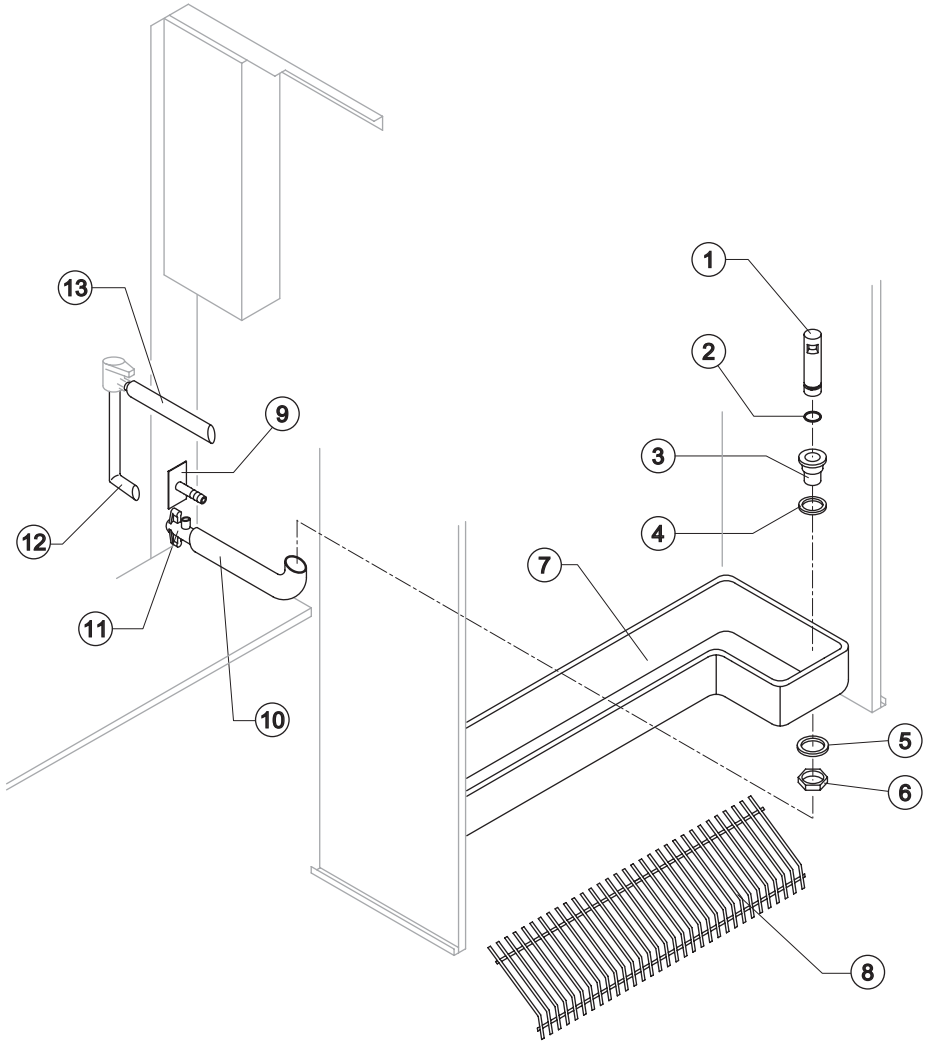

Common Parts


Ref.	Spare Description	Code
1*	Overflow Pipe	10133
2*	OR Gasket for Overflow Pipe	20233
3	Overflow Pipe Nipple	10471
4	Silicone Gasket	13219
5	Semirigid Polyethylene Gasket	13007
6	Bin Discharge Nut	10096
7	Water Basin	10395
8	Ice Cubes Slide	D12057
10	Overflow Pipe Nipple	13120
11	Drain Nipple	10431
12	Discharge Valve Connection Pipe - Discharge	13040
13	Discharge Valve Connection Pipe (“T” Shaped)	13102

Parts for Water-Cooled Version Only

Ref.	Spare Description	Code
9	Connection with Plate	C20462

Rev. 14 - 11/05/2021

SPRAYER PUMP

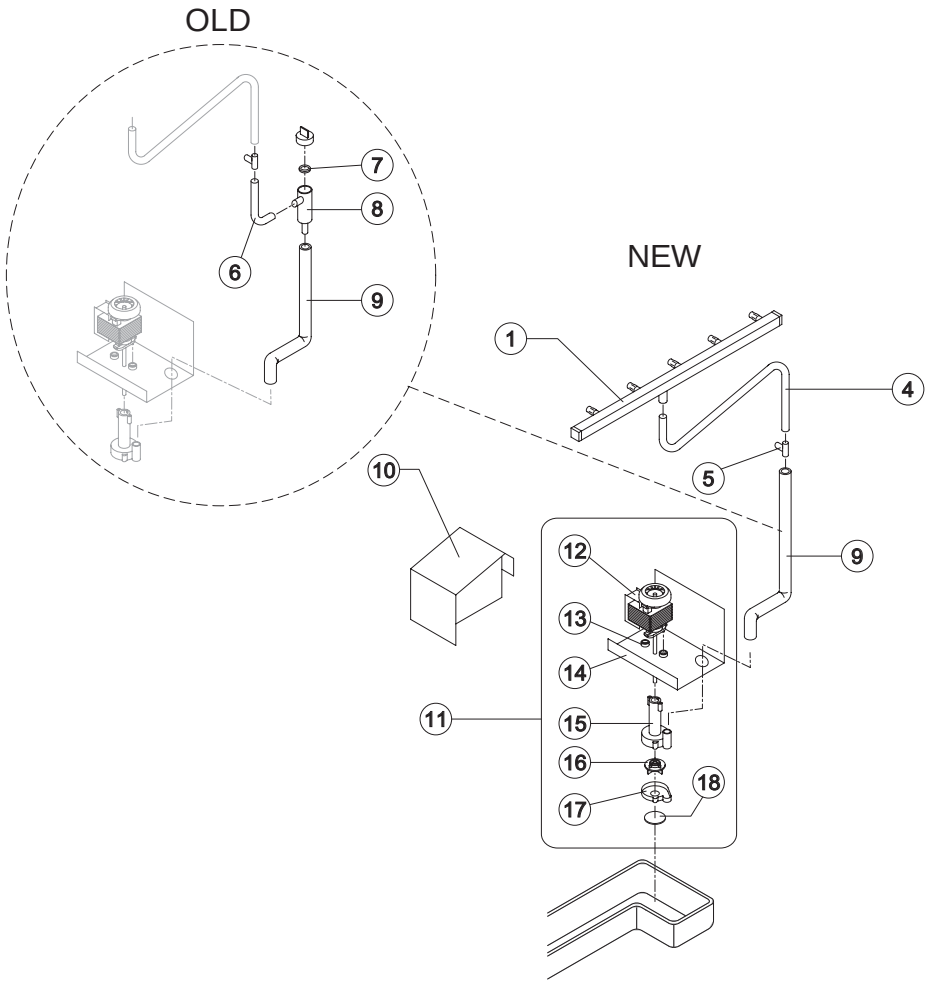

Ref.	Spare Description		Code
1*	Sprayers Bar Assembly		C20465
4	Sprinkler Bar Connecting Pipe (“T” Shaped)		13134
5	Plastic “T” ø 20		10082
6	Sprayers Feeding Pipe	OLD version	13005
7	Pump Filter Gasket	OLD version	13080
8	Pump Filter	OLD version	10139
9	“T” - Pump Connection Pipe		See Table
10	Protection Pump Panel		22804
11*	Pump Assembly		See Table
12	Pump		See Table
13	Pump Motor Shim		20510
14	Pump Motor Support		22799
15	Pump Body		10065
16	Pump Impeller		See Table
17	Diffusor		10067
18	Pump Filter		20518

Ref. 9 - “T” - Pump Connection Pipe

Version	Code
NEW	13113
OLD	13157

Ref. 11 - Pump Assy*

Voltage	Code
220-240V ~ 50Hz	C23624
220-230V ~ 60Hz	C23616

Ref. 12 - Pump


Voltage	Code
220-240V ~ 50Hz	R23073
220-230V ~ 60Hz	23187

Ref. 16 - Pump Impeller

Voltage	Code
220-240V ~ 50Hz	10066
220-230V ~ 60Hz	10138

Rev. 14 - 11/05/2021

OLD

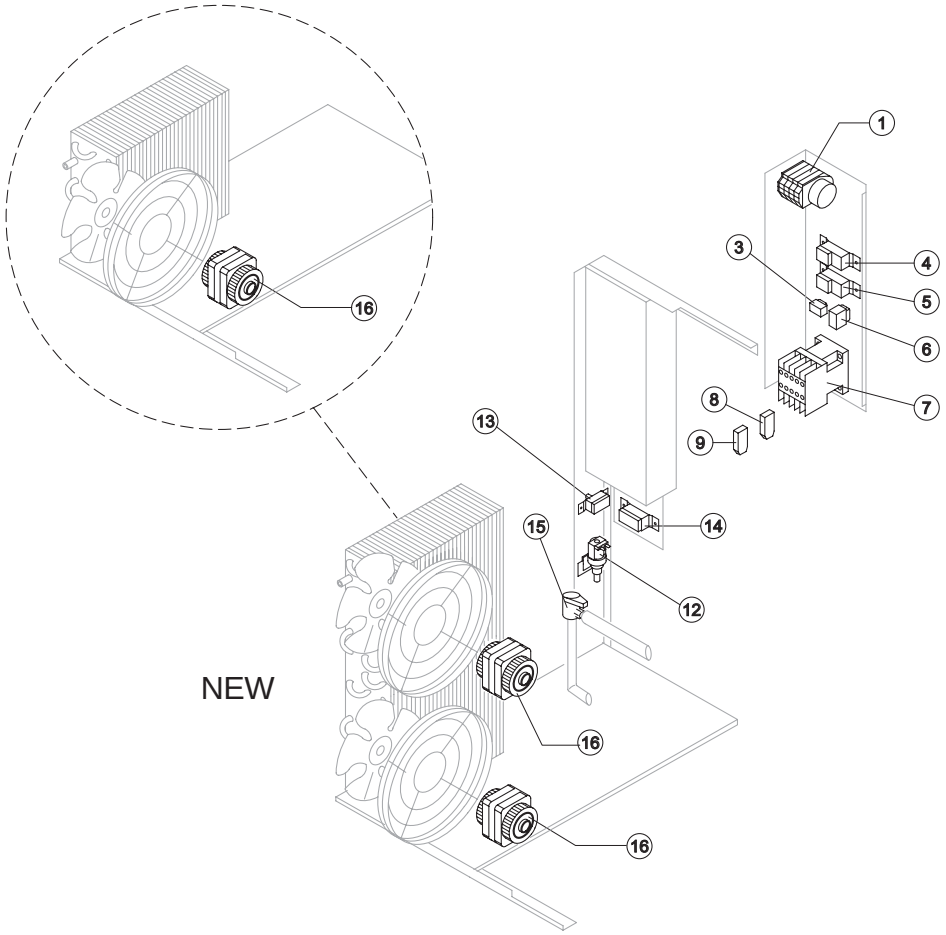

NEW

Common Parts

Ref.	Spare Description	Code
1*	Timer	See Table
3	“Cleaning” Switch	23619
4*	Bin Thermostat	23005
5*	Evaporator Thermostat	23597
6*	Green Light Switch (On-Off)	23327
7*	Contactor	See Table
12*	1 Way- Water Inlet Valve	23787
13	Safety Pressure Switch	23342
15*	Water Outlet Valve	23537

Parts for Air-Cooled Version Only

Ref.	Spare Description		Code
8	Anti Radio Interference Filter	Only T11	C23459
9	Anti Radio Interference Filter	Only T11	C23458
14*	Condenser Pressure Switch		23175
16*	Fan Motor		23121

Ref. 1 - Timer*

Voltage	Code
220-240V ~ 50Hz	23635
220-230V ~ 60Hz	23632

Ref. 7 - Contactor*

Voltage	Code
220-240V ~ 50Hz	23147
220-230V ~ 60Hz	23963

Rev. 14 - 11/05/2021