LIST OF THE EXPLODED VIEWS

From s/n. 297566 up Today



SHELL ASSY

COOLING SYSTEM


HYDRAULIC CIRCUIT

SPRAYER PUMP

ELECTRIC PARTS

Rev. 15 - 11/05/2021

SHELL ASSY

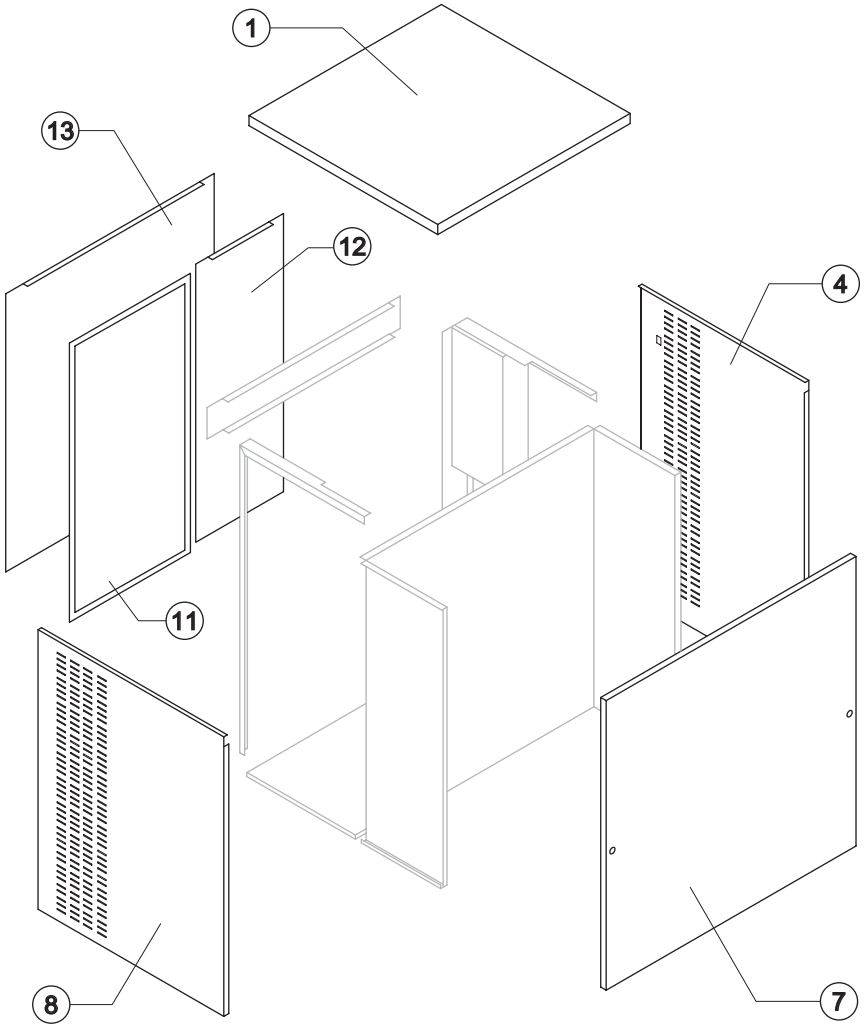

Common Parts

Ref.	Spare Description	Code
1	Top Assembly	C22813
4	Right Side Panel	22408
7	Front Panel Assembly	C22816
8	Left Side Panel	22822

Parts for Air-Cooled Version Only


Ref.	Spare Description	Code
11*	Filter	18166
12	Rear Panel	21287

Parts for Water-Cooled Version Only

Ref.	Spare Description	Code
13	Rear Panel	21285

Rev. 15 - 11/05/2021

Till s/n. 515427

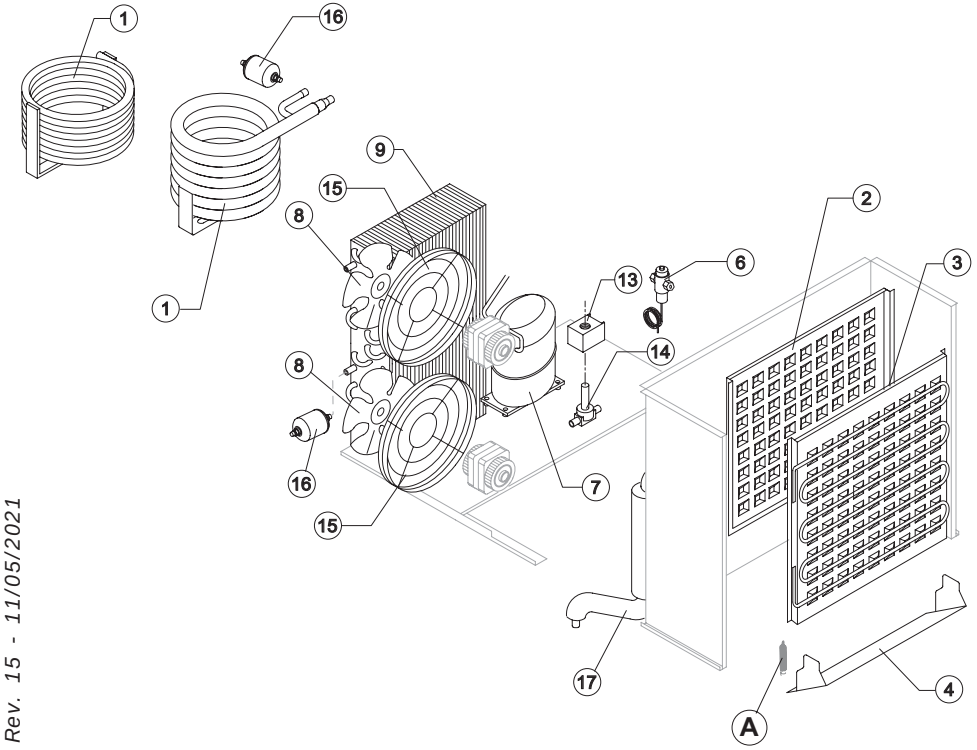

Common Parts

Ref.	Spare Description	Code
2	Evaporator (Back)	D10227
3	Evaporatore (Front)	D10228
4	Horizzontally Hinged Panel	22608
7	Compressor	See Table
13*	Hot Gas Valve Coil	231294
14*	Hot Gas Valve Body	201162
16*	Liquid Line Drier	14084
17	Suctin Line for the spare parts code give us the s/n.	

Parts for Air-Cooled Version Only

Ref.	Spare Description	Code
8	Sucking Fan	20407
9	Air Condenser	20838
15	Fan Motor Grid	12056

Parts for Water-Cooled Version Only

Ref.	Spare Description		Code
1	Water Condenser	Current Version	14660
1	Water Condenser	Till s/n. 515427	14285
6	Pressostatic Valve		20149


Eliminated the Spring (horizontally hinged panel) ref. A, suggested removal even from the models where they are present.

Ref. 7 - Compressor

Voltage	Code Current Version	Code from s/n. 661503 till.....	Code till s/n. 661502
220-240V ~ 50Hz	231365	R231079% till s/n.946078	23647
220-230V ~ 60Hz	231385	R231081% till s/n.946078	23651
400-415V 3~ 50Hz	231379	R231085% till s/n. 958103	23709
220-230V 3~ 60Hz	231083	231083	23708

% if the model is air-cooled add suffix B, if it is water-cooled add suffix C

HYDRAULIC CIRCUIT

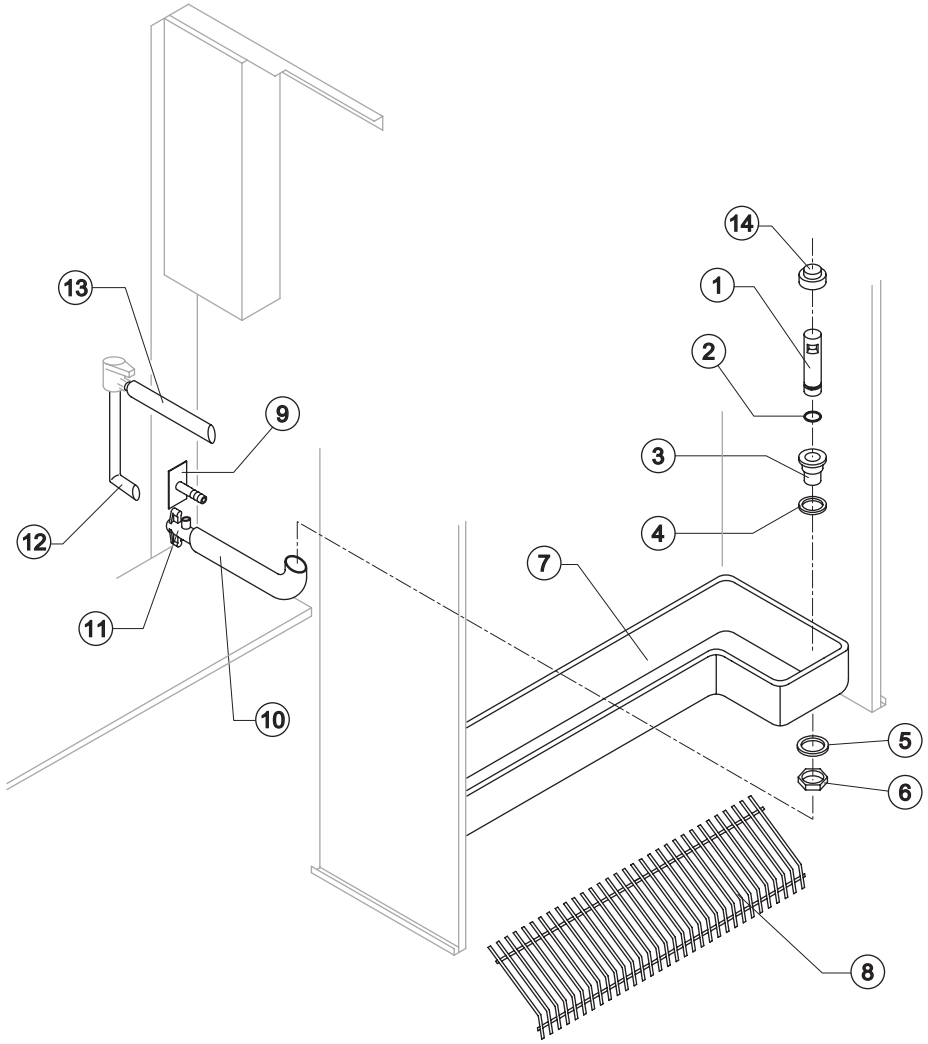


Common Parts

Ref.	Spare Description	Code
1*	Overflow Pipe	10399
2*	OR Gasket for Overflow Pipe	20233
3	Overflow Pipe Nipple	10471
4	Silicone Gasket	13219
5	Semirigid Polyethylene Gasket	13007
6	Bin Discharge Nut	10096
7	Water Basin	10395
8	Ice Cubes Slide	D12057
10	Overflow Pipe Nipple	13120
11	Drain Nipple	10431
12	Discharge Valve Connection Pipe - Discharge	13040
13	Discharge Valve Connection Pipe (“T”Shaped)	13102
14*	Overflow Cap	10305

Parts for Water-Cooled Version Only

Ref.	Spare Description	Code
9	Conenction with Plate	C20462

SPRAYER PUMP

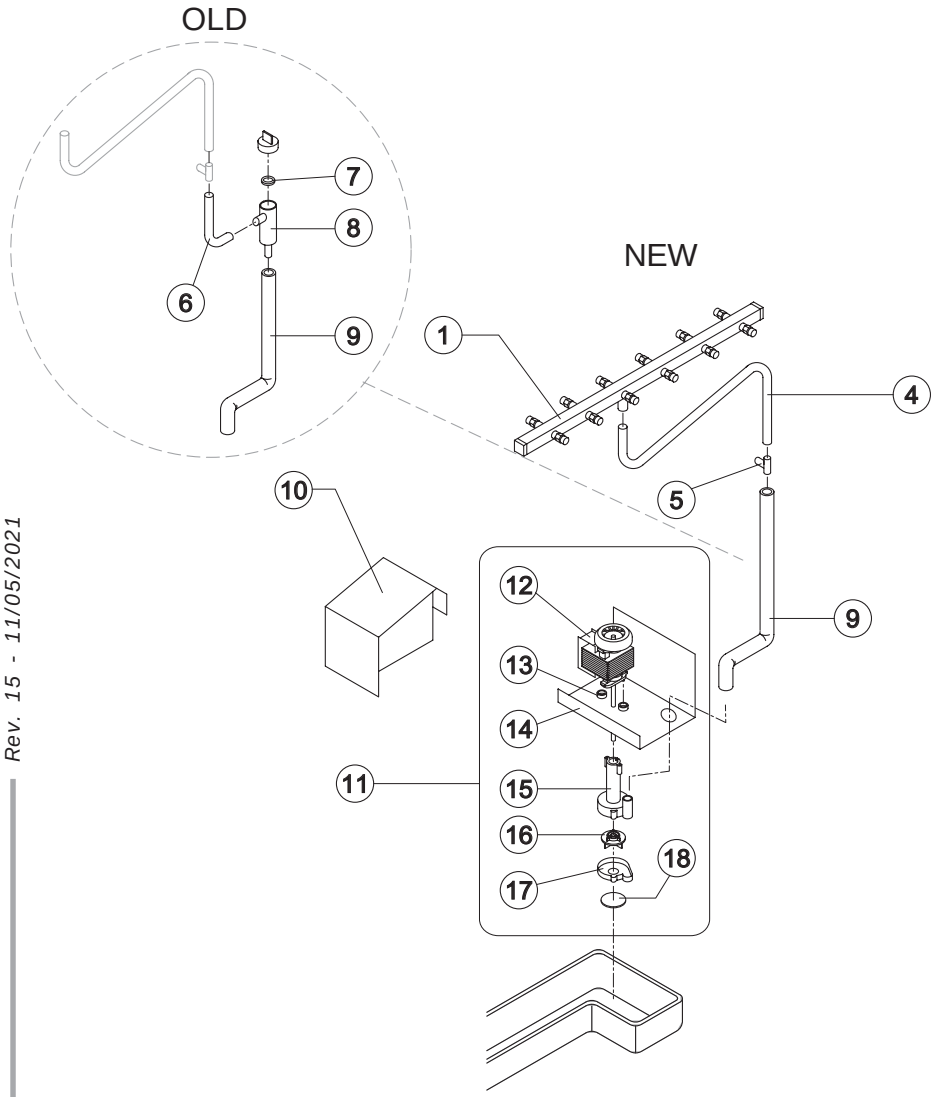

Ref.	Spare Description		Code
1*	Sprayers Bar Assembly		C20617
4	Sprinkler Ba Connection Pipe (“T” Shaped)		13134
5	Plastic “T” ø 20		10082
6	Sprayers Feeding Pipe	OLD version	13005
7	Pump Filter Gasket	OLD version	13080
8	Pump Filter	OLD version	10139
9	“T” - Pump Connection Pipe		See Table
10	Protection Pump Panel		22804
11*	Pump Assembly		See Table
12	Pump		See Table
13	Pump Motor Shim		20510
14	Pump Motor Support		22799
15	Pump Body		10065
16	Pump Impeller		See Table
17	Diffusor		10067
18	Pump Filter		20518

Ref. 9 - “T”-Pump Connection Pipe

Version	Code
NEW	13113
OLD	13157

Ref. 11 - Pump Assy*

Voltage	Code
50Hz	C23626
60Hz	C23627


Ref. 12 - Pump

Voltage	Code
50Hz	23600
60Hz	23601

Ref. 16 - Pump Impeller

Voltage	Code
50Hz	10066
60Hz	10138

Rev. 15 - 11/05/2021

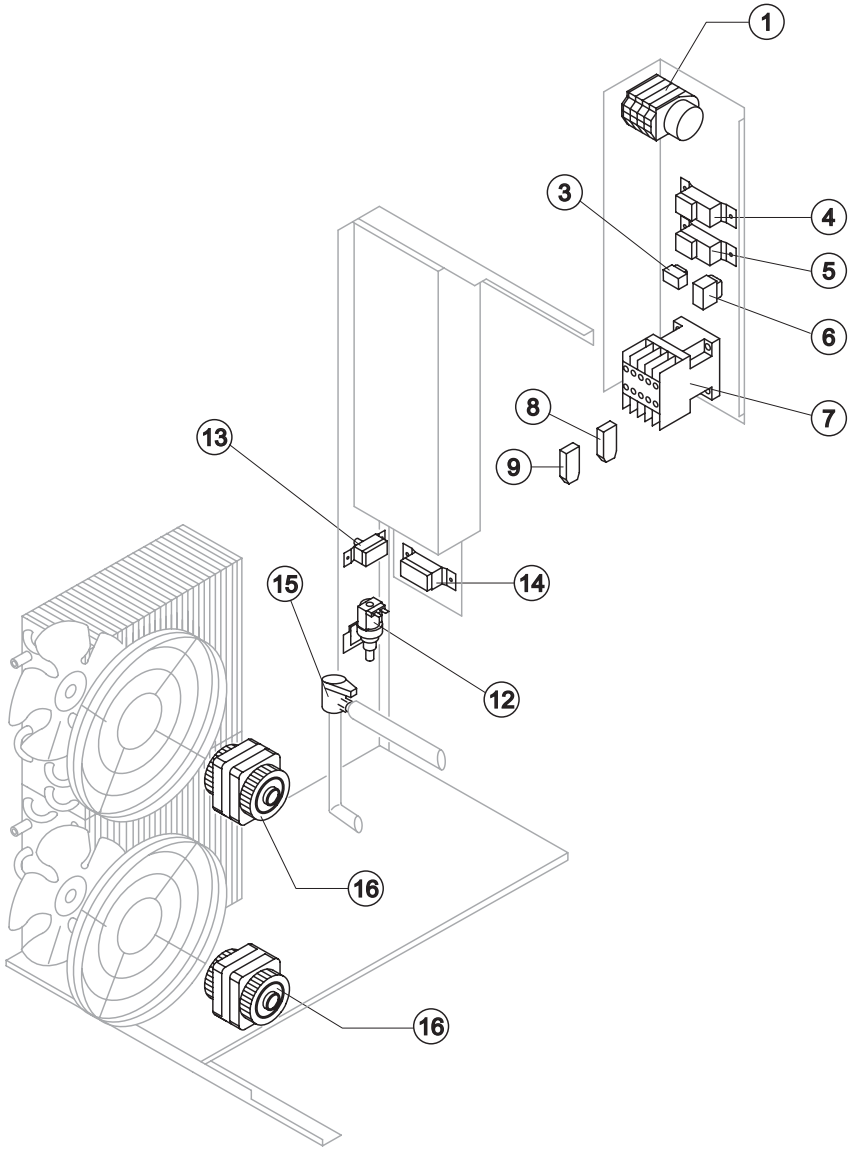

Common Parts

Ref.	Spare Description	Code
1*	Timer	See Table
3	“Cleaning” Switch	23619
4*	Bin Thermostat	23005
5*	Evaporator Thermostat	23597
6*	Green Light Switch (On-Off)	23327
7*	Contactor	See Table
12*	1 Way- Water Inlet Valve	23623
13	Safety Pressure Switch	23342
15*	Water Outlet Valve	23537

Parts for Air-Cooled Version Only

Ref.	Spare Description		Code
8	Anti Radio Interference Filter	Only 50Hz	C23459
9	Anti Radio Interference Filter	Only 50Hz	C23458
14*	Condenser Pressure Switch		23175
16*	Fan Motor		23121

Ref. 1 - Timer*

Voltage	Code
50Hz	23635
60Hz	23632

Ref. 7 - Contactor*

Voltage	Code
50Hz	23147
60Hz	23963

Rev. 15 - 11/05/2021